



CONTEMPORARY PATIO PERGOLA

PLEASE SEE OVERLEAF FOR ASSEMBLY INSTRUCTIONS

NB. These instructions describe the concrete-in method of fixing using 2.7m posts. Bolt Down Anchors or Spikes may be used with 2.1m posts as alternative methods of fixing.

ALL PRODUCTS ARE MEASURED TO THE HIGHEST AND WIDEST POINT AND ALL SIZES ARE APPROXIMATE

PLAN

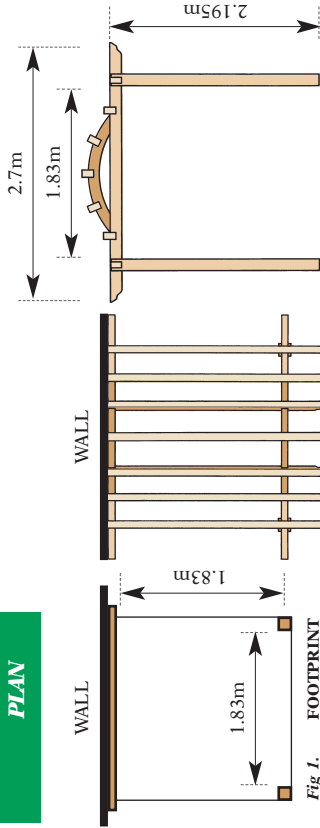



Fig 1. FOOTPRINT



GRANGE FENCING LIMITED
 Halesfield 21, Telford TF7 7PA
 Tel: 01952 588088
 Fax: 01952 581522
 Email: sales@grangefencing.co.uk
 Web: www.grangefencing.co.uk

OUT OF HOURS MESSAGE SERVICE:
01952 588088

Grange Code: PKCPPA

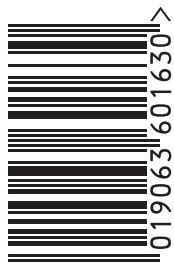

JULY 2011 - ISSUE 2








NOTE:
 THE CONTEMPORARY PATIO PERGOLA SHOWN HERE USED A DIFFERENT METHOD THAN OUTLINE METHOD. FOR ASSEMBLY TO BE SECURE THE RAFTERS


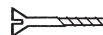
CONTEMPORARY PATIO PERGOLA (PKCPPA)



PARTS SUPPLIED

Ref.	Description		Qty.
A	POSTS		2
B	RAFTERS		2
C	RAFTERS		7
D	CURVED BEAM		2

**CONTEMPORARY PATIO PERGOLA
ASSEMBLY INSTRUCTIONS**

1x HARDWARE PACK & ACCESSORIES:			
x	SCREWS		18
y	SCREWS		3

TOOLS REQUIRED (*not supplied*)

CROSS HEAD SCREWDRIVER

BEFORE YOU START

- Check the pack/s and make sure that you have all of the parts listed above. If not, contact your retailer who will be able to help you.
- When you are ready to start, make sure you have the right tools to hand, plenty of space and a clean, dry area for assembly.
- It is advisable for two people to carry out the work.

SITE PREPARATION

Mark out the area where the structure is to be sited using the 'footprint' shown overleaf.

Excavate a 300mm² hole for each post to a depth of at least 300mm (see **Fig.A**).

We would recommend that you use **MetCrete**, fast set post fixing concrete to fix your posts. Easy to use, it sets in just 10 minutes.



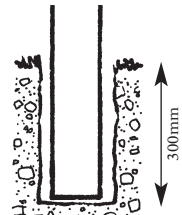


Fig A.

ASSEMBLY

1. The curved Beams (D) have to be fixed to the Rafters (B). Mark the centres of the Rafter and the Curved Beam and line up before fixing the Curved Beam with screws (x) to the rafter.
2. Once this has been done, mark out the points where the remaining rafters (C) will be fixed. Two of the Rafters will locate in the top of the posts to form a square structure. Therefore, two points between the centre and the posts need to be marked (see **Fig.2**).
3. One of the rafters with the curved beam attached needs to be fixed to a wall at a height level with that of the front one when fitted into the posts.
4. Ensure the rafter is level and central to the frame it is being fitted over and fix to the wall using three screws (y) as shown in **Fig.2**.
5. Beginning with two Posts for the front of the structure, position them where they will be fixed. Do **NOT** fix at this point.
6. Next, insert one of the Rafters with a Curved Beam attached into the tops of the Posts (**Fig.3**)
7. The side Rafters locate within the tops of the Posts and the Rafter with the Curved Beams attached.
8. Locate one of the side Rafters into the assembled end section, and secure the free end to the rafter fixed to the wall. Repeat this for the other side rafter.
9. Fix the two front corner points with screws (x).
10. Fix the remaining five Rafters at the points previously marked starting at the centre using screws (x).

11. Ensure the structure is vertical and square before fixing the Posts in place (see **Fig.4**).

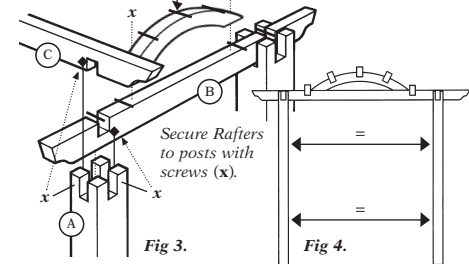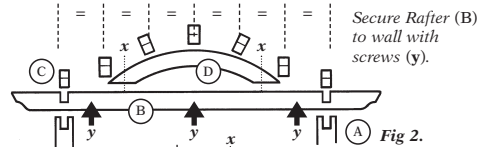

WHEN USING AS AN EXTENSION TO THE CONTEMPORARY PERGOLA

The following changes need to be made to allow the Contemporary Patio Pergola to be used as an extension to the Contemporary Pergola.

The rafters used in the Contemporary Pergola kit need to be cut down to the same length as the ones used in the Contemporary Patio Pergola kit.

One of the rafters with the curved beam attached becomes redundant.

The structure is then assembled fixing the rafters equally spaced on the central curved beam rafter.